

Measuring for Your Shower Door

Ordering the correct size shower door enclosure is the first step to a proper installation. The drawings on this page are to help us assist you in finding the best door for your application.

DOOR MEASUREMENTS

The following measurements are required to determine the door size.

Note that a small door adjustment allows for minor variation in the width measurements.

With the door type and measurements in hand, select the door that fits the intended area.

Alcove Door

- Use the largest width measurement (A, B or C) to select door model size.

Example: A=31 in., B=31 1/2 in., C=31 1/4 in. requires a 31 1/2 in. door.

Note: If there is no model in the required size, select the next higher range or width.

- Select door(s) with sizes equal to or less than the height measurement (D).


Corner Door

- Use the wall measurement (A) to select door model size.


Example: A = 32 in. requires a 32 x 32 door.

Note: For neo-round and neo-angle doors, use the side panel measurement (B) to check if the selected door fits the base.


- Select door(s) with sizes equal to or less than the height measurement (C).

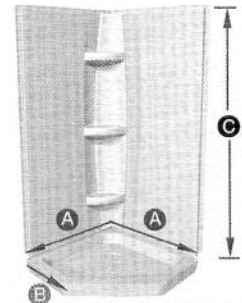


NEO-ANGLE

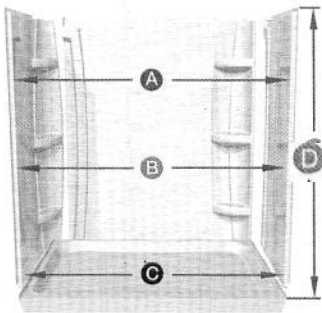


ALCOVE SHOWER

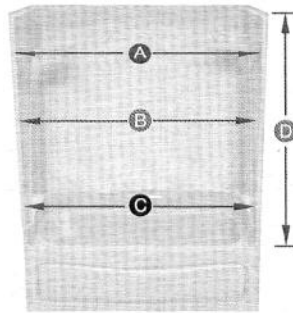

ALCOVE TUB

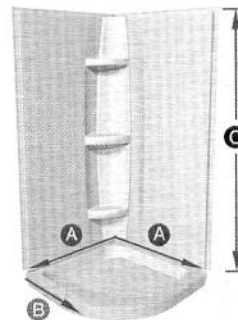

NEO-ROUND

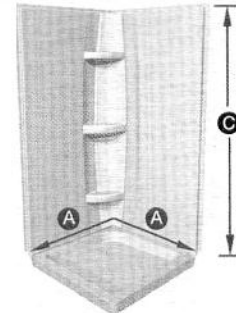

SQUARE

A B C Width from wall to wall

D Height of the wall from the top of the base to the top of the wall

Note: It is normal for the door to be smaller than the base as the door is positioned at the center of the threshold. A small door adjustment allows for minor variation in width measurements.

A Length along the wall from finished wall to the end of the threshold

B Neo-round: Width along the exterior of the threshold from finished wall to the first corner of the base

Neo-angle and Square: Width along the exterior of the threshold from finished wall to the end of the straight line

C Height of the wall from the top of the base to the top of the wall.

(A) _____
 (B) _____
 (C) _____
 (D) _____

Walls: Tile Fiberglass Acrylic Stone Cultured Marble
 Wall Surround Solid Surface Other : _____

Does Your Walls Go to the Ceiling?: YES NO
Is there a ?... Soffit Bonnet Ceiling Dome None

TYPE: Neo-Angle Alcove Shower Alcove Tub Neo-Round Square (Double Threshold)
 Other : _____

While standing in front of your shower is your showerhead on the... Right ... or ... Left ?

Checklist for Measuring

- ✓ Measuring must be done AFTER finished wall material is in place.
- ✓ Measure each width or centerline (middle of threshold). Remember to allow for the body of the measuring tape.
- ✓ Check all surfaces (including top of buttress if applicable) and walls for level.